



Schartec Funk-Innentaster UPB-1/ UPB-2

SCHARTEC
eine Marke der bau-shop-24 GmbH
Fritz-Müller-Strasse 119
73730 Esslingen
Germany

WEEE Reg. Nr.: DE90317979
BattG Reg. Nr.: 21008776



Frequenz: 433,92 MHz RC
dBm: 10
Arbeitsstrom: ≤ 12 mA
Kanäle: 1/ 2
Batterie: 12V/27A
Arbeitstemperatur: -20°C bis +60°C
Artikelnummer: ST301035/ ST301036
Modellnummer: YET2166-1/ YET2166-2
Nur für den Innenbereich geeignet



- Geben Sie Funksender niemals in Kinderhände.
- Die Funksender dürfen ausschließlich von Personen bedient werden die mit der Anlage vertraut sind und in deren Funktion eingewiesen sind.
- Verwenden Sie den Funksender ausschließlich, wenn Sie das Tor einsehen können.
- Das Anlernen der Funksender muss stets in der Nähe des Torantriebs vorgenommen werden. Verwenden Sie ausschließlich Originalteile.
- Schützen Sie den Funksender vor Witterung wie Regen, Schnee, Sonneneinstrahlung oder auch Staub, ansonsten kann die Funktion des Senders beeinträchtigt werden.
- Zum Wechseln der Batterie lösen Sie bitte die Wippe des Senders mit der Hand.

Programmierung

ACHTUNG! Beim Einlernen des Handsenders kann die Torfahrt versehentlich ausgelöst werden.


1. Drücken Sie die CODE-Taste am Display Ihres Schartec Move Garagentorantriebs. Ein Punkt in der Ecke des Displays erscheint.
2. Drücken Sie nun einmal den Funk-Innentaster. Warten Sie nun 2 Sekunden und drücken Sie den Funk-Innentaster erneut für ca. 2 Sekunden. Der Punkt auf dem Display blinkt um den Code zu bestätigen und geht dann aus.

WICHTIG für UPB-2! Zum anlernen des zweiten Kanals (Wippe 2) gehen Sie gleich vor wie bei Kanal eins.

Montage/ Batteriewechsel



1. Ziehen Sie die Wippe am oberen Ende per Hand ab
Hängen Sie diese anschließend am unteren Ende aus

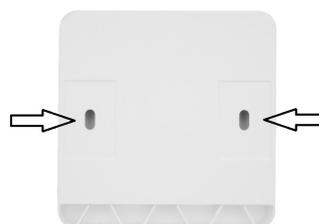

2. Befestigen Sie den Funk-Innentaster mit zwei Schrauben an der gewünschten Stelle auf der Wand.

ACHTUNG! Schrauben nicht zu fest anziehen, da die Unterschale sonst brechen kann.

Video zur Programmierung:
finden Sie auf www.schartec.de

Vereinfachte EU-Konformitätserklärung (CE)

Hiermit erklärt Schartec, dass der Funkanlagentyp YET2166 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung kann unter der folgenden Internetadresse angefordert werden: www.schartec.de

Informationen zu Batterieverordnung

Als Händler für den Vertrieb von elektronischen, batteriebetriebenen Geräten sind wir gesetzlich verpflichtet unsere Kunden auf folgendes hinzuweisen:

Elektro- und Elektronik- Geräte, sowie Batterien dürfen nicht als Haus- oder Restmüll entsorgt werden, sondern müssen in den dafür eingerichteten Annahme- und Sammelstellen abgegeben werden.

Die vollständige Fassung des Batteriegesetzes finden Sie hier:
<http://www.gesetze-im-internet.de/bundesrecht/battg/gesamt.pdf>



Schartec wireless push button UPB-1/ UPB-2

SCHARTEC
a trademark of bau-shop-24 GmbH
Fritz-Müller-Strasse 119
73730 Esslingen
Germany

WEEE Reg. Nr.: DE90317979
BattG Reg. Nr.: 21008776



Frequency: 433,92 MHz RC
dBm: 10
Power Consumption: ≤ 12 mA
Channels: 1/ 2
Battery: 12V/27A
Working temperature: -20°C to +60°C
Article number: ST301035/ ST301036
Model number: YET2166-1/ YET2166-2
Only use in dry rooms



- Keep wireless push buttons out of reach of children.
- Wireless Push Buttons may only be operated by persons who are familiar with the system and have been instructed in their function.
- Use the wireless push button control only when you are in sight of the door / gate.
- Coding in wireless push buttons must always be carried out within the vicinity of the door operator. Use only original parts.
- Protect wireless push buttons from rain, snow, sunlight or dust, otherwise the function of the transmitter may be impaired
- To replace the battery, remove the top of the push button by hand.

Programming:

WARNING! When teaching in a remote, the operator may be accidentally triggered initiating door movement!


1. Press the Code button on the display of the Schartec Move garage door opener. A small dot (.) will appear in the corner.
2. Now press the button on the remote you want to use, wait 2 seconds, then press and hold the same button on the remote again for 2 seconds. The dot (.) on the display will flash to confirm the code, then go out.

IMPORTANT for UPB-2! To teach in the second channel (button 2), proceed in the same way as for channel one.

Mounting/ Battery Change



1. Gently pull the button off by hand at the upper end. Then unhook it at the lower end.

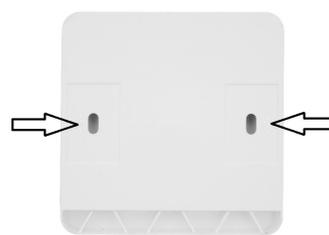

2. Fasten the wireless internal push button with two screws at the desired location on the wall. **ATTENTION!** Do not over-tighten the screws as this could break the lower shell.

Programming Video
Please visit www.schartec.de/en

Simplified EU Declaration of Conformity (CE)
Schartec hereby declares that the remote control YET2166 complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following Internet address: www.schartec.de/en

Information about battery regulation
As a dealer for the distribution of electronic, battery-operated devices, we are obliged by law to inform our customers about the following:

Electrical and electronic devices, as well as batteries, must not be disposed of as household or residual waste, but must be delivered in the appropriate acceptance and collection points will.

The complete version of the battery law can be found here:
<http://www.gesetze-im-internet.de/bundesrecht/battg/gesamt.pdf>